


CulinaTech


High-Speed Blender

Model No.: CB1


INSTRUCTION MANUAL

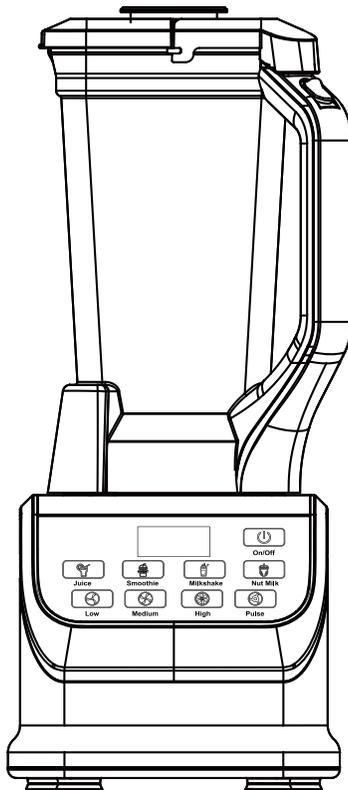

Product Structure

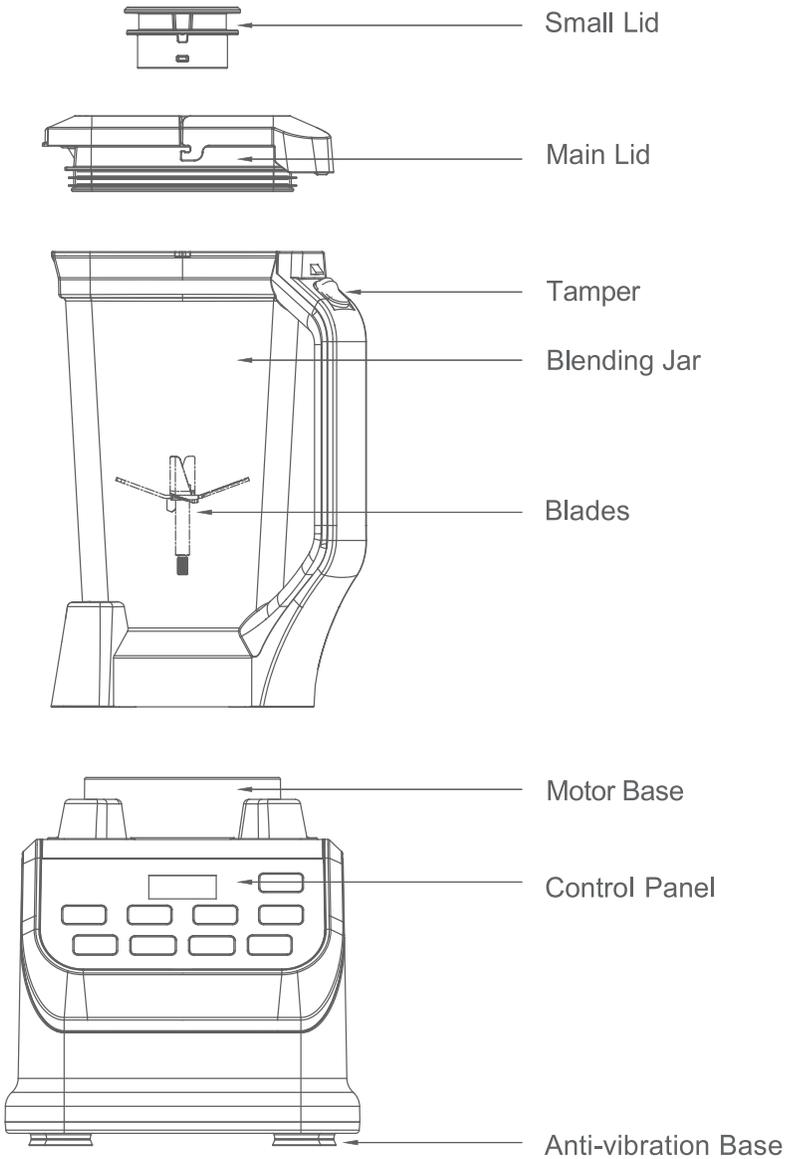

Function and Operations

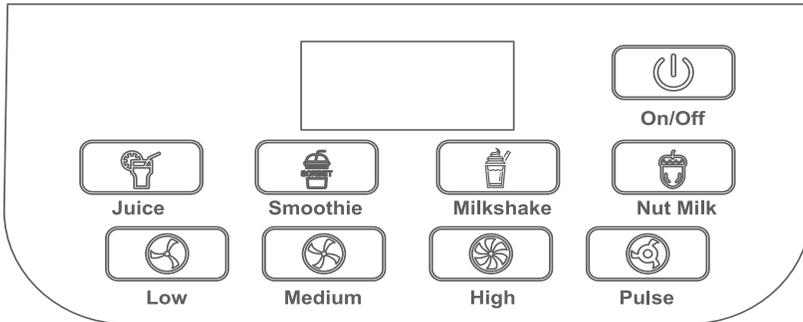

Operation Process:

1. Press the "On/Off" button. The function menu light will turn on.
2. Touch any function button to select it. The selected function icon will blink (all other function lights will turn off). After selecting a function, press "On/Off" again to begin blending. If no function is started within 30 seconds, the machine will return to standby mode.
3. Press and hold the selected function button. The machine will instantly run at the highest speed to crush food. Keep the button pressed to continue blending; release it to stop immediately.




Blending Functions

Function	Description	Applicable Ingredients	Notes
Juice	Add no more than 150g of fruit, cut into cubes no larger than 3 cm, then add water. The water level must not exceed the “cold drink” scale line inside the cup.	Apple, mango, strawberry, watermelon, pineapple, grape, grapefruit, cantaloupe, etc.	<ol style="list-style-type: none"> 1. If the water level is below the fruit, mixing may be affected. Add slightly more water than fruit. 2. For cleaning, add water to the maximum scale, but do not exceed it.
Smoothie	Add no more than 200g of standard ice cubes, then add water just enough to soak them. The water level must not exceed the 2000 ml scale line.	Ice cubes	Do not exceed the highest water mark
Milkshake	Add no more than 150g of fruit for milkshake, cut into cubes no larger than 3 cm, then add milk. The water level must not exceed the “cold drink” scale line inside the cup.	Dragon fruit banana milkshake, mango kiwi milkshake, banana milkshake, mango milkshake, blueberry banana milk, purple potato–banana milkshake, cucumber–banana milkshake, etc.	If insufficient milk is added, mixing will be affected. Add just enough milk to cover the ingredients.
Nut milk	Add no more than 150g of nuts, then add milk. The water level must not exceed the “cold drink” notch line inside the glass.	Walnuts, peanuts, almonds, cashews, etc.	If the milk level is too low, it will not pass through the nuts properly, which affects mixing. Add more milk than nuts.

Product Specification Parameters

Product Parameter	
Product name	High-speed blender
Product model	CB1
Voltage	220-240V/110V
Rated frequency	50-60HZ
Motor power	1000W
Rated capacity	2000mL
Product size	L207*W226*H467mm

Care and Maintenance

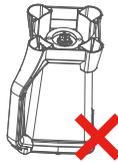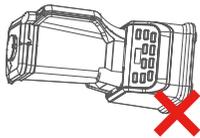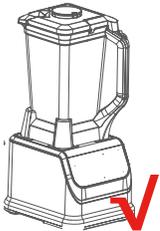

Cleaning demonstration

1. Always unplug the power supply and let the appliance cool completely before cleaning. Never plug in or unplug the power cable with wet hands, as this can cause electric shock.
2. Do not wash the product directly in water. Avoid using corrosive cleaning agents or abrasive tools such as steel wool on the cup liner.
3. During heating, minerals in the water (such as calcium carbonate and magnesium carbonate) may naturally form scale. Lighter deposits float on the surface as foam, while heavier ones settle at the bottom. Scale can increase both boiling time and boiling noise.
4. To remove scale, use a **citric acid descaling agent** or edible vinegar. For the vinegar method, mix water and vinegar in a **2:1 ratio**, boil it, then let it sit overnight. The next day, pour it out and boil fresh water once to rinse away any residue.

Product Notes

Important Safety Instructions

Note: For first-time use, fill the machine with water up to the maximum water level mark. Boil, pour out, and rinse with clean water once or twice to remove any dust from production and storage.

When using this product, please pay close attention to the following safety precautions:

1. Before using, ensure the voltage matches the rating on the nameplate.
2. Do not wipe the plug with a wet cloth, and do not insert or remove the plug with wet hands. This may cause electric shock.
3. Before switching on, check that the power cord is fully inserted into the socket. A loose connection may cause overheating and fire.
4. Do not place the product near heat sources such as ovens or microwave ovens.
5. Do not immerse the product in water or other liquids. This may cause a short circuit or electric shock.
6. If the power cord is damaged, it must be replaced with a special cord or part provided by the manufacturer or service department.
7. This product must not be operated by children, or by persons with physical, sensory, or mental limitations without supervision. Do not leave the appliance unattended during use.
8. This product is intended for **household use only**. Do not use for commercial or industrial purposes.
9. The high-speed motor produces alternating fast and slow sounds during operation — this is normal.
10. Do not put hands, utensils, metal objects, or foreign objects into the mixing cup. This may cause injury or damage.
11. Do not exceed the maximum water level mark indicated on the cup.
12. Do not place the machine near heat sources, or place rags or objects underneath that may block the air vents. Poor ventilation may trigger the motor's thermal protector. If this occurs, unplug the machine, allow it to cool, and then restart.
13. During operation, when the liquid in the mixing cup is boiling, be careful of hot water or steam escaping from the lid. Do not remove the lid while in use.
14. Always unplug the appliance and clean it after use.
15. The blades are very sharp. Do not touch them directly. Handle with care during cleaning. Do not attempt to remove the blades or touch any moving parts.
16. Do not attempt to disassemble, repair, or modify the product without authorization. For service or repair, contact us or a qualified technician.