


# USER MANUAL

2 SLICE TOASTER

CT1-2S

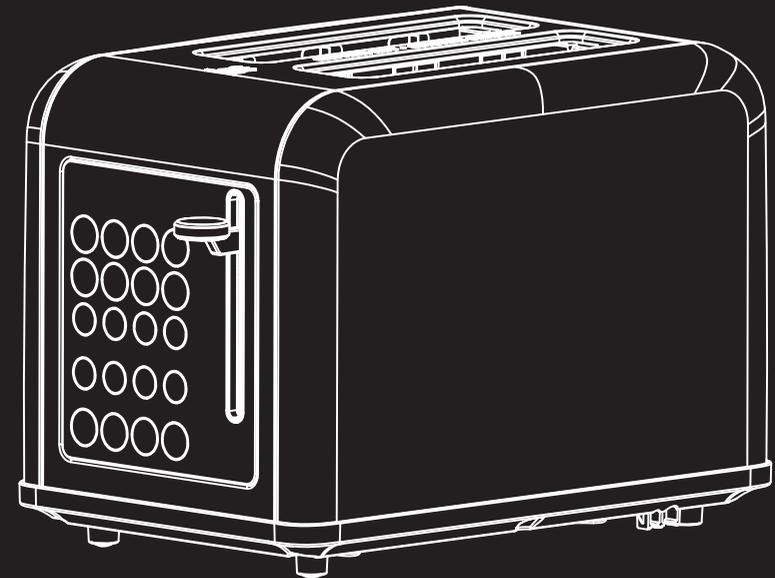

**NEED HELP? TALK TO US!**

CUSTOMER SUPPORT

Email: [info@culina.tech](mailto:info@culina.tech)





## **Customer Support**

If you have any issues or questions regarding your product, please contact us:

Email: [info@culina.tech](mailto:info@culina.tech)

Please have your order number ready when contacting Customer Support.

**THANK YOU FOR  
YOUR PURCHASE!**

**ON BEHALF OF ALL OF US  
HAPPY COOKING!**

# CONTENTS

Important Safeguards . . . . .	01
Know Your Machine. . . . .	03
Use and Care . . . . .	04
Cleaning and Maintenance . . . . .	08
Troubleshooting. . . . .	08
Warranty. . . . .	09

<b>Toastistoo Light/toodark</b>	Check the selected browning setting. Use a lower setting if toast is too dark, or a higher setting if too light. Also confirm that the <b>Frozen button</b> is not selected.
<b>Theleverwouldn'ts taydown</b>	1. Ensure the lever is pushed fully to the bottom. 2. Clean out crumbs by turning the toaster upside down and gently shaking.
<b>Smokecomesoutoft hetoaster.</b>	Press the <b>Cancel button</b> to stop toasting. Empty and clean the crumb tray if it is full.
<b>Thecordis damaged.</b>	If the cord is damaged, it must be replaced by an <b>authorized service center</b> .

## Warranty

We provide a one-year product warranty from the date of purchase for all our products. We will cover all quality-related issues with either a replacement or a full refund, including return shipping costs. If your product is defective and still under warranty, please contact us.

To minimize delays, please follow our warranty process:

1. Note the product model name (found on a sticker located underneath or on the back of the product).
2. Provide the order number if the purchase was made through Amazon.

The typical turnaround time for warranty claims is 10 business days, depending on your geographical location and the type of claim.

This warranty does not apply to:

- Damage caused by abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage during return transit.
- Unsupervised use by children under 18 years of age.

Neither CulinaTech nor its subsidiaries assume liability for damage caused by use of the product other than for its intended purpose or as instructed in the user manual. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**All expressed and implied warranties, including the warranty of merchantability, are limited to the period of this limited warranty.**

### Additional Tips

- Your toaster is designed for balanced toasting. Some heating elements may glow more brightly than others — this is normal.
- To remove food jammed in the bread slots: **Unplug the toaster first** and wait until it cools before removing the food.
- Do not place food on top of the toaster while it is operating.
- Never attempt to dislodge food using the toast lift lever, as this may damage the toaster.

## Cleaning and Maintenance

Always allow the toaster to cool completely before cleaning.

1. **Unplug the toaster** from the electrical outlet before cleaning.
2. Do not use abrasive cleansers. Wipe the exterior with a clean, damp cloth, then dry thoroughly. If using a cleansing agent, apply it to the cloth — not directly to the toaster.
3. To remove crumbs, slide out the **crumb tray**, empty it, wipe clean, and replace. **Never operate the toaster without the crumb tray in place.**
4. To remove any bread pieces remaining inside, turn the toaster upside down and gently shake. **Never insert hard or sharp objects into the slots**, as this may damage the toaster or create a safety hazard.
5. Do not wrap the cord around the outside of the toaster. Use the **cord storage cleats** located on the underside of the toaster.
6. Any other servicing should be performed only by an **authorized service representative**.

## TROUBLESHOOTING

The answers to these questions should help resolve most problems. If your toaster still does not work properly, please contact our support team by email: [info@culina.tech](mailto:info@culina.tech)

Problem	Solution
The toaster does not work	Make sure the plug is properly inserted into the wall outlet.
Bread gets stuck in appliance	Unplug the toaster and allow it to cool down. Carefully remove the bread without damaging the heating elements. <b>Never use a metal object</b> to remove food.

## IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. Read **all** instructions.
2. Always unplug from the outlet when not in use and before cleaning. Allow to cool before cleaning or handling.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not place any part of the toaster in water or other liquid. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any way, or if it is not operating properly. Please contact our support team by email.
7. The use of accessory attachments not recommended by CulinaTech may cause injury.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of the table or countertop, or touch hot surfaces.
10. Do not place the toaster on or near a hot gas or electric burner, or in a heated oven.
11. Do not use this toaster for other than its intended use.
12. Oversized foods, metal foil packages, or utensils must not be inserted into the toaster, as they may cause fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies, or walls, when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food while the toaster is plugged into an electrical outlet.
15. To avoid the possibility of fire, do not leave the toaster unattended during use.
16. To disconnect, press the cancel button, then remove the plug from the wall outlet.
17. **WARNING:** To reduce the risk of fire or electric shock, repairs should only be performed by authorized personnel. No user-serviceable parts are inside.
18. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so may create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

# SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

## Special Cord Set Instructions

A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Longer extension cords may be used if proper care is taken.

When using a longer extension cord, the marked electrical rating of the extension cord should be at least as high as that of the appliance. The cord should be arranged so that it does not hang over the edge of a countertop or tabletop, where it could be pulled on by children or cause accidental tripping.

## NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician.

**Do not attempt to defeat this safety feature.**

## Product Specifications

Productname	Toaster
Model	CT1-2S
Power	825W 750-880W
Voltage/Frequency	120V/60Hz 220V-240V/50-60Hz

## Bagel Button

The **Bagel** feature extends the toasting cycle for optimal results with bagels.

Steps:

1. Insert slice(s) of bread or halved bagels.
  - Ensure slices do not overlap.
  - Make sure the carriage is in the up position.
2. Press the **Bagel button** (icon will flash).
3. Press the **Carriage Lever** down until it locks into place.

To stop the cycle:

  - When the bagel cycle is complete, the toaster will raise the bread automatically.
  - To stop early press the **Cancel button**.

## Memory Button

The **Memory** feature saves your preferred bread type and browning level for future use.

Steps:

1. Select your desired **bread type** and **browning level** (1–8).
2. Press and hold the **Memory button** for 3 seconds. The buzzer will sound a long beep (2 seconds) to confirm that the setting is saved.
3. The next time you press the **Memory button**, the memory icon will blink together with the corresponding function icon, then stay lit during heating.

## Single Button

The **Single Slice** feature ensures even browning when toasting only one slice of bread.

Steps:

1. Insert a single slice of bread.
2. Press the **Single button** (icon will blink).
3. Press the **Carriage Lever** down until it locks into place.

## Add Time Button

The **Add Time** feature allows you to increase or cancel extra toasting time.

Steps:

1. Press the **Add Time button** once to add 15 seconds.
2. Press it again to cancel the added time.
3. The icon will flash when selected.

## Tips

- Never force food into the toasting slots. Food should fit freely between the heating wires.
- Do not place buttered bread or pastries with fillings or frostings in the toaster, as this may create a fire hazard.
- Uneven toasting is usually caused by bread slices of uneven thickness.
- Always unplug the toaster from the electrical outlet after use.

## Defrost Button

The **Defrost** function first defrosts and then toasts bread, slightly extending the toasting cycle.

Steps:

1. Insert slice(s) of bread.
  - Ensure slices do not overlap.
  - Make sure the carriage is in the up position.
2. Set the **Browning Control** (icon will flash):
  - **Setting 1–2:** Refrigerated breads and thin frozen items (e.g., frozen pancakes).
  - **Setting 3–6:** Toaster pastries, frozen waffles, thin French toast, or refrigerated bagels.
  - **Setting 7–8:** Thick frozen items such as bagels, hand-cut bread, or thick French toast.
3. Press the **Defrost button** (icon will flash).
4. Press the **Carriage Lever** down until it locks into place.

## To stop the cycle:

- When the defrost cycle is complete, the toaster will raise the bread automatically.
- To stop early, press the **Cancel button**.

## Reheat Button

The **Reheat** function warms bread without further browning or toasting.


Steps:

1. Insert slice(s) of bread.
  - Ensure slices do not overlap.
  - Make sure the carriage is in the up position.
2. Press the **Reheat button** (icon will flash).
3. Press the **Carriage Lever** down until it locks into place.

## To stop the cycle:

- When the reheat cycle is complete, the toaster will raise the bread automatically.
- To stop early, press the **Cancel button**.

# KNOW YOUR MACHINE

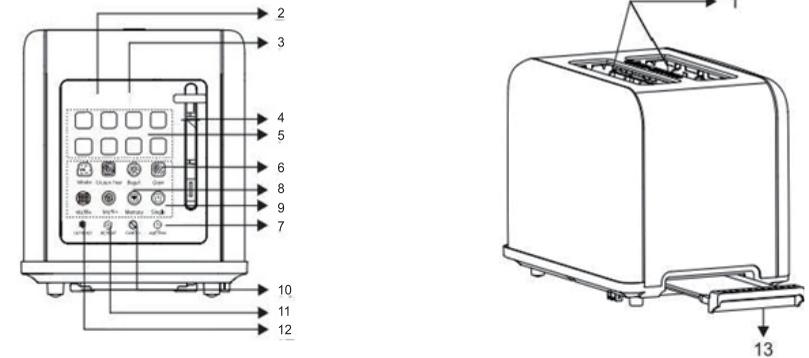

<p><b>1. Dual Panels &amp; 4 Slots</b> 1.5-inch slots toast a wide variety of breads</p>	<p><b>8. Single Slice Button</b> Toasts only one slice of bread. Icon flashes when selected.</p>
<p><b>2. Browning Control Setting Display</b> Shows the currently selected browning / color level.</p>	<p><b>9. Add Time Button</b> Press once to add 15 seconds. Press again to cancel the added time. Icon flashes when selected.</p>
<p><b>3. Working Time Display</b> Displays the remaining toasting time. Press and hold for 3 seconds to enter Sleep Mode.</p>	<p><b>10. Cancel Button</b> Short press to interrupt the toasting process. Press and hold for 3 seconds to enter Sleep Mode.</p>
<p><b>4. Carriage Control Level</b> Press to the bottom to start toasting</p>	<p><b>11. Reheat Button</b> Reheats bread without additional browning or toasting. Icon flashes when selected</p>
<p><b>5. Browning Control</b> Adjusts the desired toast color, from light to dark. There are 8 browning levels available. Icon flashes when selected.</p>	<p><b>12. Defrost Button</b> Defrosts and toasts frozen bread. Icon flashes when selected.</p>
<p><b>6. Memory Button</b> Choose your preferred bread type and browning level (1–8). Press and hold for 3 seconds to save settings (buzzer beeps for 2 seconds). When used again, the memory button icon and corresponding function icons blink; during heating, the icon remains lit.</p>	<p><b>13. Slide-out Crumb Tray</b> Pulls out easily for cleaning crumbs that collect at the bottom of the toaster.</p>
<p><b>7. Type of Bread</b></p> <p>Selects the type of bread. Icon flashes when selected.</p>	<p><b>Quick Operation Steps</b></p> <p>Step 1: Select and press the icon for the type of bread. Step 2: Select and press the icon for the desired toast color. Step 3: Press the Extra-Lift Carriage Control Lever to begin toasting.</p>

# USE AND CARE

## Before Using the Appliance for the First Time

1. Unpack the appliance carefully and check if any parts are damaged or missing.  
CAUTION: Carefully remove all packing and shipping materials (including inside the slots and under the Bread Lever) as well as any price tags. Do not remove any warning or rating labels from the appliance. Ensure there are no foreign objects (e.g., packing materials) in the slots before operating.
2. Wipe the outside of the toaster with a damp cloth.
3. Insert the Removable Crumb Tray into the crumb tray slot.
4. Make sure the Bread Lever is in the uppermost position before plugging in the toaster's power cord.
5. Select an appropriate location for the toaster. The location should be:
  - On a flat, heat-resistant, non-flammable surface.
  - At least 3 inches away from walls or the back of countertops.
  - At least 1 foot away from any cabinets or shelving above the toaster.
  - Away from flammable materials such as curtains and wall fabric.
  - Away from gas stove flames or electric heating elements.
6. Plug the Power Cord into a 120V, 60Hz AC outlet.
7. Without inserting any food into the bread slots, push the Bread Lever all the way down until it locks (note: the Lever will not lock if the toaster is not plugged in).  
This first toasting cycle will preheat the new elements and burn off any dust from storage or manufacturing. It is normal for this process to produce a slight odor.

## To Toast Your Bread:

1. Insert Slice(s) of Bread
  - Ensure the carriage is in the up position.
  - Place the bread slices in the slots, making sure they do not overlap.

2. Set the Browning Control

Touch the browning icon to select the desired level.

Dial Setting	Color
1-2	Light
3-6	Medium
7-8	Dark

## Notes on Browning

Toasting is both a cooking and drying process. Because breads vary in moisture content, toasting times will differ. Keep the following in mind:

- For slightly dry bread, use a lower setting than normal.
- For very fresh bread or whole wheat bread, use a higher setting.
- Breads with uneven surfaces (such as English muffins) require a higher toast setting.
- Thickly cut pieces of bread (including bagels) take longer to toast, sometimes significantly longer, because more moisture must evaporate before browning occurs. Very thick slices may require two cycles.
- When toasting raisin or fruit breads, remove any loose raisins or fruit pieces before toasting. This helps prevent fruit from falling into the toaster or sticking to the guide wires.
- Slice bagels into two equal halves before toasting.

## Single-Slice Toasting

When toasting a single slice of bread, set the browning control to a lighter setting than you would for two slices. The toaster is designed to heat the entire chamber, so reducing the setting prevents over-toasting a single slice.

## Frozen and Specialty Breads

The following should be warmed using the Defrost button:

- Frozen waffles
- Frozen pancakes
- Frozen French toast
- Frozen bagels

Toaster pastries may also be warmed, but use caution: the filling can become very hot long before the outside browns. Never leave toaster pastries unattended while toasting or warming.

## To Begin Toasting

- Press the Carriage Lever down until it locks into place.

## To Stop Toasting

- When the toasting cycle is complete, the toast will automatically rise.
- To stop the cycle early, press the Cancel button.